




Ecosure Super Complete Installation Instructions

Note: These instructions are to be carried out after the rainwater harvesting tanks have been installed.


Remember

Please use PTFE tape on all fitting to give the best performance from the water pump.

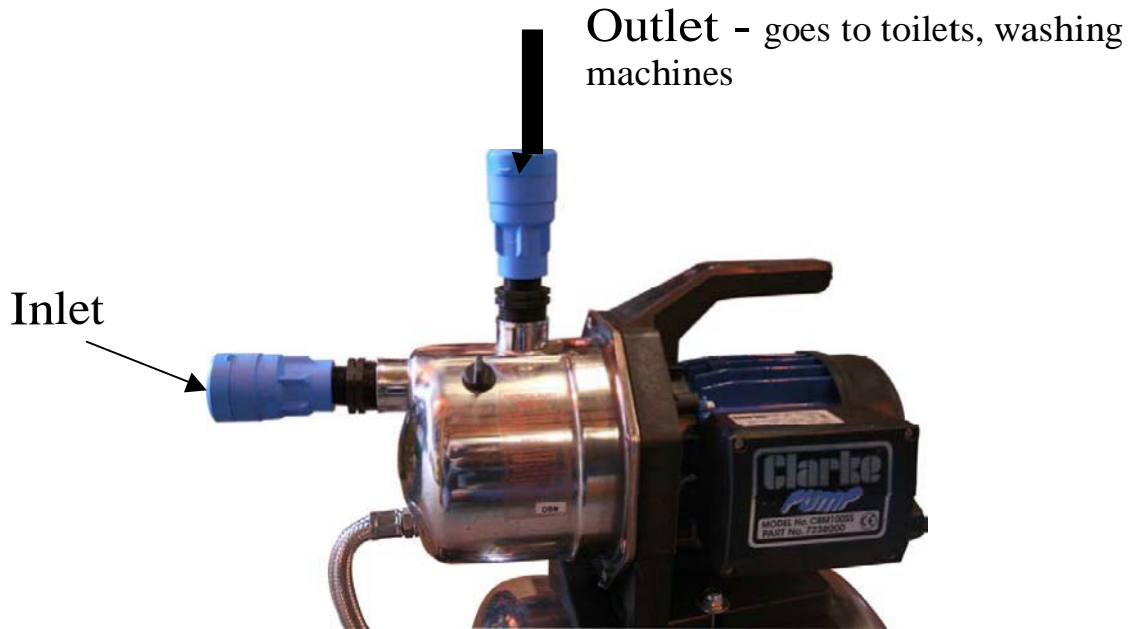


Inlet Pipe (from the tank)

Connect the reducer to the inlet on the side of the pump and connect the pipe connector provided to the reducer. You can now attach your blue pipe to the inlet of the water pump.

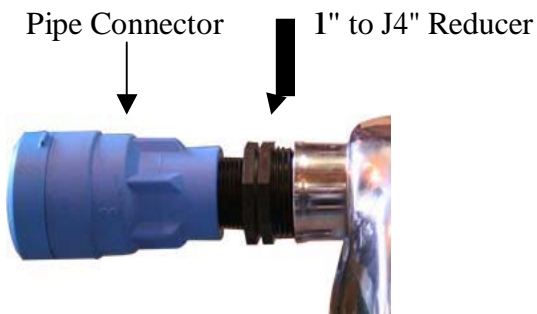



At the other end of the blue pipe connect the non-return suction valve.

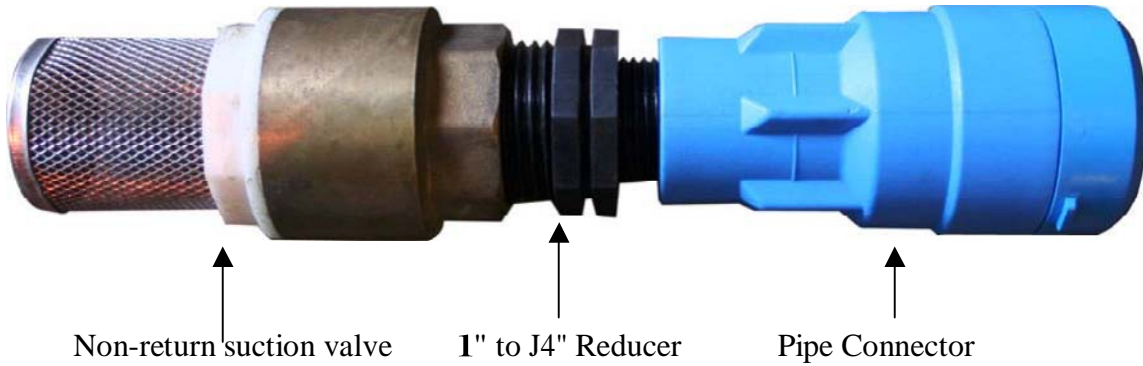

This pipe can now be dropped in to the water tank

Outlet Pipe (to toilets, washing machines, gardens etc)

Use the reducer provided to screw into the top outlet of the water pump, and then screw the pipe connector onto the reducer. You can now attach your pipe and run the pipe to toilet, washing machine or garden tap etc.

