



Ecosure
Efills Ltd
Unit 1, Whiting Way
Melbourn, Royston
SG8 6NA

Phone: 01763 261781
Email: sales@ecosure.co.uk
Website: www.ecosure.co.uk



EASYCONNECT

RAINWATER HARVESTING SYSTEM
INSTALLATION GUIDE




THANK YOU

Thank you for purchasing the Ecosure EasyConnect System. We hope that you are happy with your purchase.

Although your water butt has been tested in accordance with our quality control procedures, please check it thoroughly to ensure that no damage has occurred in transit and report any damage within 48 hours of delivery.


WATER BUTT INSTALLATION GUIDE

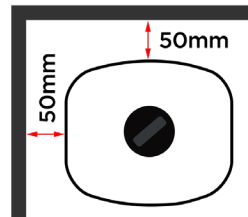

- Tanks must be sited on a flat, level concrete base. If you are installing two water butts they must be level with each other.
- Please leave at least a 50mm gap all around the tanks. This will allow for the natural expansion of the tanks when full of water.
- Install the Guttermate rainwater diverter approximately 40mm below the top of the tank, according to the manufacturer's guidelines.

SINGLE TANK SYSTEM

- Install the Guttermate rainwater diverter approximately 40mm below the top of the tank, according to the manufacturer's guidelines. The internal surface must be flat to allow a watertight seal.
- Install the wall mounted tap using PTFE tape.
- Cut pipe to length and connect Hydroforce pump to wall mounted tap.

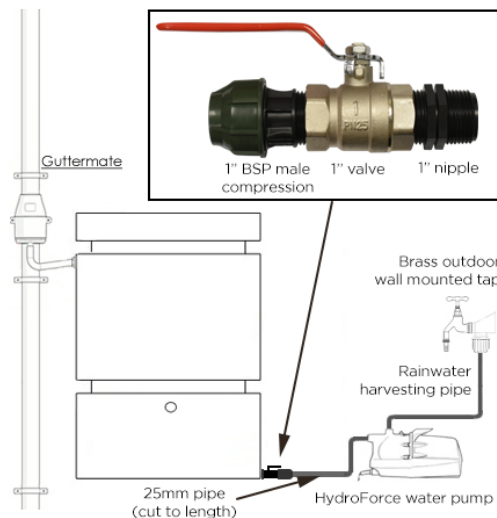

MULTI-TANK SYSTEM

- Drill two adjacent 1" outlets for the connection kit using a 29mm holesaw or a spade bit, being careful not to damage the threaded outlet itself.
- Fit the 1" BSP compression fittings to both tanks using PTFE tape. Do not overtighten.
- Cut the pipe to the required length and connect to the compression fittings. Ensure pipe is cut square and pushed past the O rings, lubricate if necessary with liquid soap or similar.
- Fit the nipple, valve and compression fitting to the tank nearest the pump, again ensuring that the outlet is drilled.
- Cut the pipe to length and connect the pump to the tank.
- Fit wall mounted elbow to the wall and fit tap using PTFE tape.

Ensure all swarf/debris is removed from the water butts.

- Cut pipe to length and connect Hydroforce pump to wall mounted tap.
- Follow HydroForce priming guidelines prior to use.

