

WATER BUTT STAND FLAT PACK

INSTALLATION GUIDE

Ecosure
Efills Ltd
Unit 1
Whiting Way
Melbourn
Hertfordshire
SG8 6NA

Phone: 01763 261781
Email: sales@ecosure.co.uk
Website: www.ecosure.co.uk



THANK YOU

Thank you for purchasing the Ecosure Flat Pack Galvanised Water Butt Stand. We trust you will be completely satisfied with your purchase. If you have any technical enquiries, please call 01763 261781 option 3.

TOOLS REQUIRED



13mm spanner



12 x 13mm bolts,
nuts & washers
(supplied)


IMPORTANT SAFETY INSTRUCTIONS

The Ecosure Flat Pack Galvanised Water Butt Stand must be sited on a flat, level base.

- Ensure that all fixings are secure and that the stand is stable before mounting your water butt
- When using any power tools, be aware of others around you and wear suitable PPE (e.g. eye protectors and gloves).

INSTALLATION GUIDE

a. Position the water butt tray on its longest, narrowest side. Position one of the legs so the fixing holes line up.

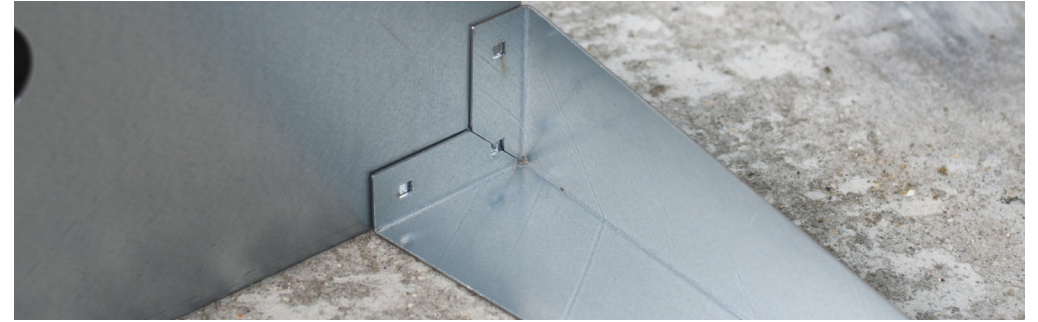

b. Push the domed bolts through from the top of the water butt tray then fix in place using the washers and nuts provided.



c. Repeat this process for the remaining support legs. Ensure that all fixings are secure and that the stand is stable before mounting your water butt.

